


---


**POWERSCAN™ M8300/BC-80X0 STAND ALONE SETUP**


When the BC-80X0 cradle is connected and powered, configure the PowerScan™ M8300 by reading the following codes in the given sequence and follow the instructions.


**Note:** for the numeric code selection of steps 3, 4, and 5 use the table at the end of this Quick Reference.

1. Restore PowerScan™ M8300 Default  



2. Enter Configuration  


3. Set Date  
  
+
- six digits for Day, Month and Year (DDMMYY).

4. Set Time  
  
+
- four digits for Hours and Minutes (HHMM).

5. Set Radio Address  
  
+
- four digits for the PowerScan™ M8300 Address  
(from 0000 to 1999).

All readers used in the same area must have different addresses.

6. Exit and Save Configuration  


7. Read the **Bind** code to pair the PowerScan™ M8300 to the BC-80X0 cradle.  
The reader is dedicated to the cradle. Any previously **bound** reader will be excluded.  
To connect several readers to the same cradle see the following section "Using Multiple Readers with Same Cradle".

Bind



The green LED on the PowerScan™ M8300 will blink: the reader is ready to be positioned onto the cradle.

8. Firmly position the reader onto the cradle within 10 seconds, a beep will be emitted, signaling that the BC-80X0 cradle has been paired to the PowerScan™ M8300, and the green LED on the reader will go off.



9. Configure the BC-80X0 cradle, refer to the "BC-80X0 Quick Reference".

**END of procedure. YOUR READER IS NOW READY TO READ CODES.**

---

# NUMERIC TABLE

---



0



1



2



3



4



5



6



7



8



9